


Installation of TEKVOX Cable Routing Brackets is a simple 3-step process. The assembly consists of a bracket designed to mount onto the underside of a table, a faceplate, a rubber grommet, a thumbscrew, and 2 wood screws.

First, use the provided wood screws to mount the bracket onto the underside of the table. Bracket should be positioned to support cables with causing overly tight turn radii.




Next, place the rubber grommet into the bracket's cutout, and run all of the cables through the grommet. Cables can be going either direction. For easy install, feed cables through in order from largest to smallest.

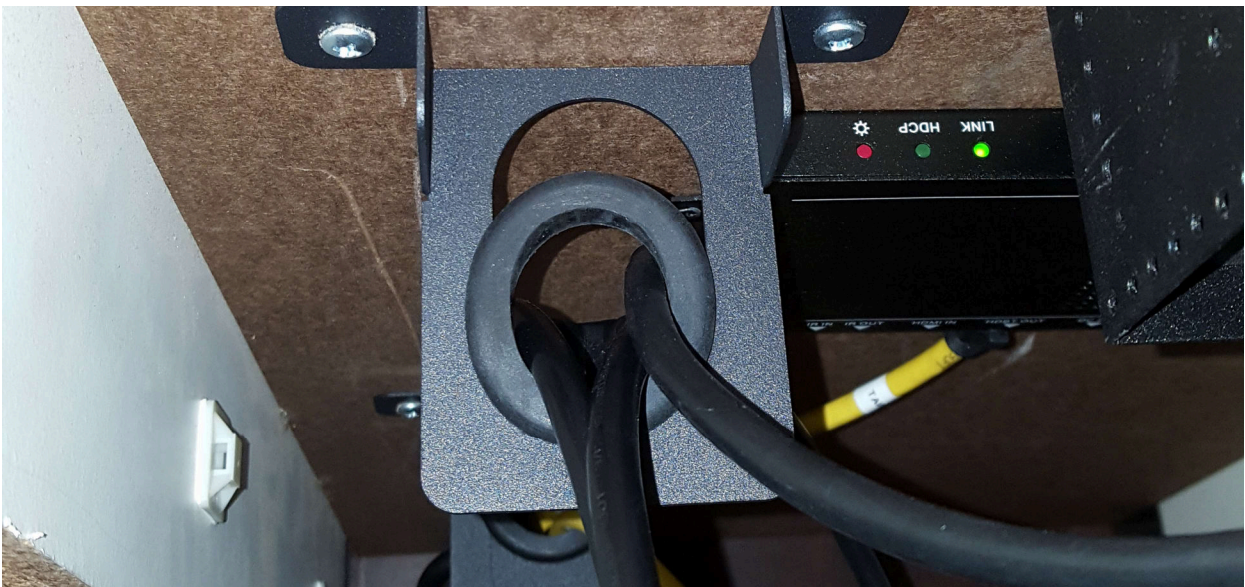



Once cables are run through the rubber grommet, slide faceplate into place so that semicircular cutout rests in the grommet's exterior groove, and the mounting hole aligns with the one on the bracket. The rubber grommet will be pushed to the top of the bracket's ovoid cutout. Pass the thumbscrew through the faceplate and thread into bracket's mounting nut. Once tight, this secures the bracket together as a single assembly.

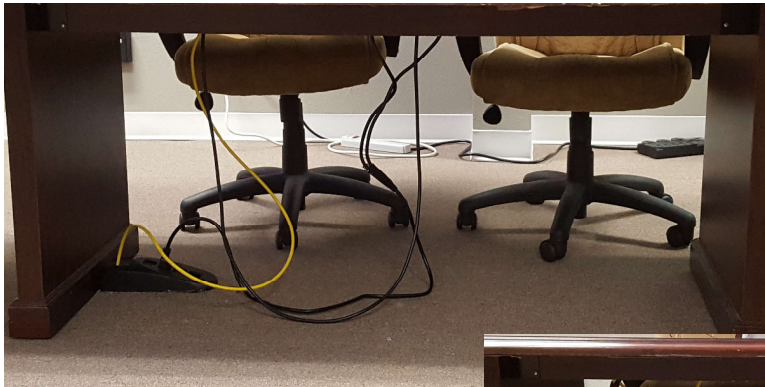

**Before**

**After**

