

# TCX10 - Podium

## 78042-10A Installation Guide

### Included in this Product Package:



TCX10  
Touchscreen



Mounting Wedge  
(x1)




#1 Security  
Screws (2)



#6 Wood  
Screws (2)

### Step 1: Select Location for TCX10

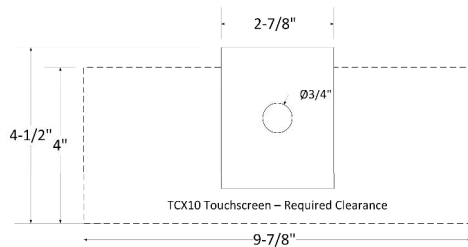

The TCX10 mounting location should be conveniently & easily accessible. TCX10 should not be directly in front of or behind any other equipment. Allow at least 4" on either side of mounting wedge. Do not mount TCX10 directly over any structural members of the furniture.

### Step 2: Drill Holes for Cable Passthrough & Mounting<sup>1</sup>

Place mounting wedge in desired TCX10 location. Very lightly trace each corner of the wedge, along with the two rear mounting holes. Remove the wedge, locate the center of the 4 corners, and drill a 1" dia. hole for the TCX10 cable. Where the mounting holes were marked, pre-drill 1/8" holes. Erase any remaining marks on the mounting surface.

### Step 3: Route Cable & Connect to TCX10




Route cable from underneath mounting surface through hole drilled in Step 2. Run cable through the mounting wedge base and out the rectangular opening in the front, and connect to the port on the back of the TCX10.

<sup>1</sup> If drilling additional holes in furniture is prohibited, skip this step and proceed with installation, following directions for over-table cable routing.

# TCX10 - Podium

## 78042-10A Installation Guide

### Step 4: Place TCX10 on Mounting Wedge

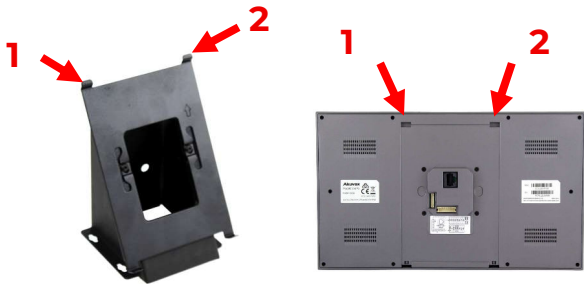

With the back of the TCX10 oriented towards the angled face of the mounting wedge, place the top tabs of the mounting plate into the indentations on the back of the TCX10. Making sure that the cable does not get pinched, kinked, or bent, lay the TCX10 so that it rests flush with the front of the mounting plate.

### Step 5: Install Security Screws



With the TCX10 firmly seated on its mounting wedge, use the provided #1 Allen wrench (in box) to insert the #1 security screws (x2) into the bottom of the TCX10 until just snug.

### Step 6: Attach TCX10 to Mounting Surface



Place TCX10 in position, lining up the 1/8" holes drilled in Step 2. Using the provided #6 wood screws (x2), attach the wedge to the mounting surface via the rear mounting holes.